

The diagram shows the R292 control panel with two main sections: CEOS and NO.

**CEOS Section:**

- Buttons: 6, 5, 60M, 60L, X, X

**NO Section:**

- Buttons: 4, 3, NA, NO, 2, 1, 60K, 60H, X, X